


Baofeng UV-5R

Quick Reference

1. antenna
2. LED flashlight (refer to #6)
3. on/off/vol knob
4. LCD display (dual VFO)
5. "CALL" button
 - quick press will turn FM broadcast radio on/off
 - long press will turn alarm on/off
6. "MONI" button
 - quick press will turn LED flashlight on/blink/off
 - press & hold to open squelch (monitor)
7. "PTT" button (push to talk)
8. VFO/MR
 - press to switch between VFO and MR modes
 - VFO = variable frequency oscillator (direct frequency input)
 - MR = "memory recall" (channel mode)
9. tx/rx indicator
10. microphone
11. keypad
12. "A/B" button
 - press to select "active" VFO (A = upper & B = lower)
 - active VFO indicated by up or down arrow on left side of display
13. "BAND" button
 - press to switch between 2m & 70cm bands (generally not used)

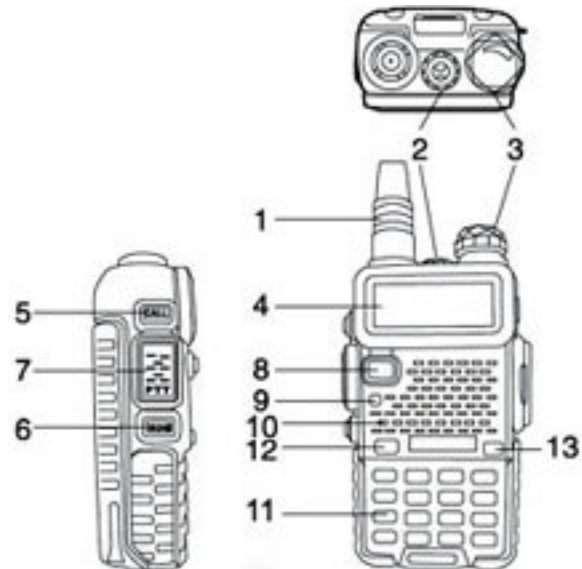

- "* SCAN" button
- quick press to activate/deactivate "reverse" mode (flips repeater offset to check simplex reception of a remote station)
 - long press to activate scan
- "# key/lock" button
- quick press to switch between high/low TX power ("L" appears on display when in low power mode)
 - long press to enable/disable keypad lock (used to prevent accidental frequency/channel changes)

